



Item no. 309/719
Manufacturer's no. 60031-00262



Remote Control SX



Information

Dimensions	6 x 17.5 x 1.5 cm
Pack size	18 x 11 x 3 cm
Net weight	100 g
Gross weight	140 g

The remote control is switched on with the on/off switch on the right side. The green LED symbol stops flashing when the remote control is ready for use. While you are manoeuvring, the remote control has to be within 10 metres of the centre of the caravan.

If the red battery light is flashing together with the green LED, a beep signals that the battery was disconnected while the remote control was switched on. If you switch off the remote control while the engines are pivoted, the safety connector is unplugged or the battery is disconnected, a yellow LED light flashes. Low battery is signalled by a warning triangle that flashes red.

Use the slide bar to steer the caravan in the direction of the drawbar.

The stronger you slide the bar forwards or backwards, the faster the Mover you are steering moves.

Use the round rotary knob to adjust the direction.

Batteries are not included (excluding 3 x AAA)

Specifications

Colour	anthracite, light grey
Suitable for	Truma Mover SX