



Item no. 309/758

Manufacturer's no. 60020-00144



Remote Control Mover XT



Information

Dimensions	6 x 15 x 5 cm
Pack size	22.1 x 12.3 x 5.6 cm
Net weight	170 g
Gross weight	190 g

The remote control is activated with the on/off switch on the right side. The green LED symbol flashes until the control is ready for use. While manoeuvring, the distance between the remote control and the centre of your motorhome must not exceed ten metres.

If the red battery lamp flashes in combination with the green LED, a signal beep sounds, which signals the disconnection of the battery while the remote control is switched on. If the remote control is turned off, the safety plug is pulled or the battery is blocked while the motor is swivelled, the yellow LED with flash icon warns you.

With the slide bar, the camper is directed in drawbar direction.

The more the bar is moved for- or backwards, the faster the controlled Mover moves.

With the four buttons next to the slide bar, the Mover swivels towards the wheels. The desired button should be pushed for approx. three seconds. As soon as the wheels are in motion, you can let go of the button.

If both buttons are pushed while swivelling, the process is stopped. The drive rolls are swivelled away and automatically move to their end position.

Specifications

Suitable for	Truma Mover XT, XT2, XT4
Type	XT

With the round rotary knob, the direction is adjusted.
Batteries are not included (excluding 3 x AAA)